FAXPHONE B540
FAXPHONE B550
MultiPASS 800

PARTS CATALOG

Canon

Canon

FIGURE 1 FAXPHONE B540
PACKAGE CONTENTS

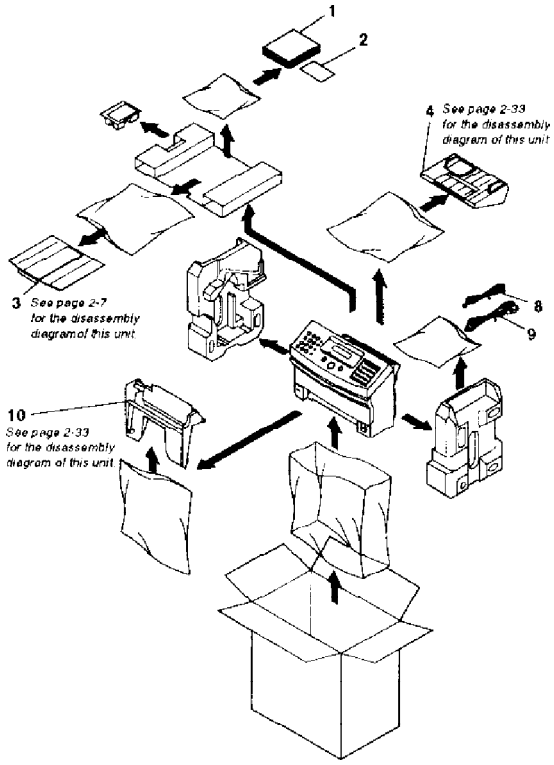
1
2
4 See page 2-33 for the disassembly diagram of this unit
3 See page 2-7 for the disassembly diagram of this unit
8
9
10 See page 2-33 for the disassembly diagram of this unit

NUM.	PART #	DESCRIPTION
1-1	HT1-2058-000	USER S GUIDE (ENG)
2	HB1-1192-000	FACEPLATE
3	NPN	PAPER OUTPUT TRAY ASSY
4	HG5-0416-000	PAPER TRAY COVER
5	HH2-2501-000	MODULAR CORD, 2P
9	WT3-5021-000	POWER SUPPLY CORD, 120V
10	HF5-0113-020	PAPER TRAY

FIGURE 2 FAXPHONE B550
PACKAGE CONTENTS

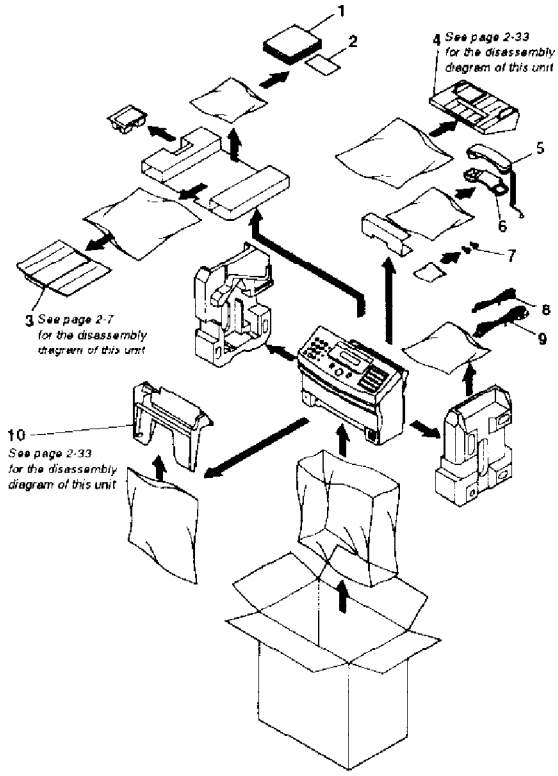
1
2
4 See page 2-33 for the disassembly diagram of this unit
5
6
7
3 See page 2-7 for the disassembly diagram of this unit
8
9
10 See page 2-33 for the disassembly diagram of this unit

NUM.	PART #	DESCRIPTION
2-1	HT1-2058-000	USER S GUIDE (ENG)
2	HB1-1192-000	FACEPLATE
3	NPN	PAPER OUTPUT TRAY ASSY
4	HG5-0416-000	PAPER TRAY COVER
5	HH7-2104-000	HANDSET ASSY (USA, AG)
6	HB1-1264-000	HOLDER, HANDSET CRADLE
7	XA9-0689-000	SCREW, HANDSET HOLDER (2)
8	HH2-2501-000	MODULAR CORD, 2P
9	WT3-5021-000	POWER SUPPLY CORD, 120V
10	HF5-0113-020	PAPER TRAY

Canon

FIGURE 3 MultiPASS 800 PACKAGE CONTENTS

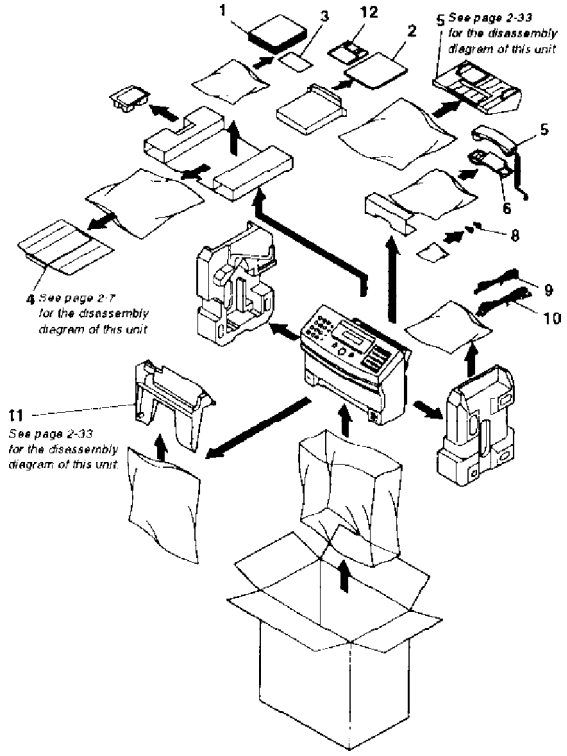

NUM.	PART #	DESCRIPTION
3-1	HT1-2060-000	USER S GUIDE (ENG)
2	HT1-2062-000	USER S GUIDE, DESKTOP MANAGER
3	HB1-1283-000	FACEPLATE
4	NPN	PAPER OUTPUT TRAY ASSY
5	HG5-0416-000	PAPER TRAY COVER
6	HH7-2104-000	HANDSET ASSY (USA, AG)
7	HB1-1283-000	HOLDER, HANDSET CRADLE
8	XA9-0689-000	SCREW, HANDSET HOLDER (2)
9	HH2-2501-000	MODULAR CORD, 2P
10	WT3-5021-000	POWER SUPPLY CORD, 120V
11	HF5-0113-020	PAPER TRAY
12	HG5-0643-000	3.5"FD DRIVER SOFTWARE

FIGURE 4 SCANNER UNIT & COVERS & TRAY

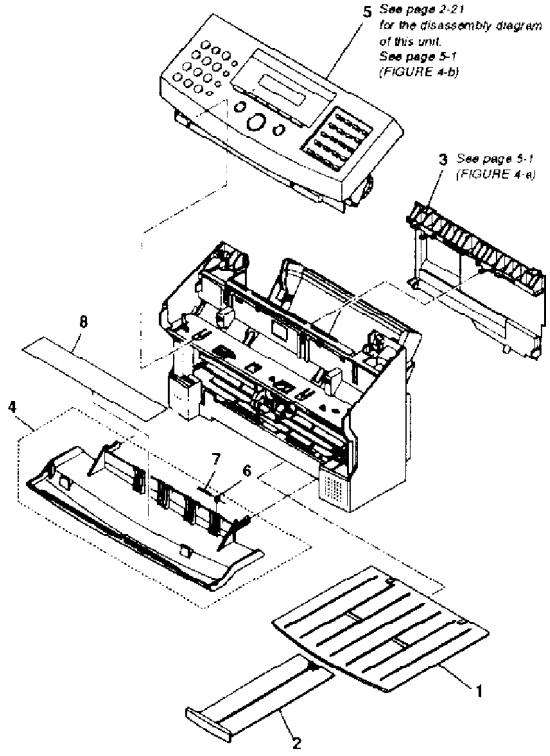

NUM.	PART #	DESCRIPTION
4-1	HB1-1229-000	PAPER OUTPUT TRAY
2	HB1-1230-000	PAPER OUTPUT TRAY EXTENSION
3	HB1-1191-040	COVER, LOGIC BOARD
4	HG5-0414-000	FRONT COVER ASSY
5	NPN	SCANNER UNIT
6	QB1-0517-000	SPUR (4)
7	QB1-0518-000	SPUR SHAFT (4)
8	HB1-1259-020	LABEL, CARTRIDGE

Canon

FIGURE 5 FAXPHONE B540
MAIN COVER & SPEAKER

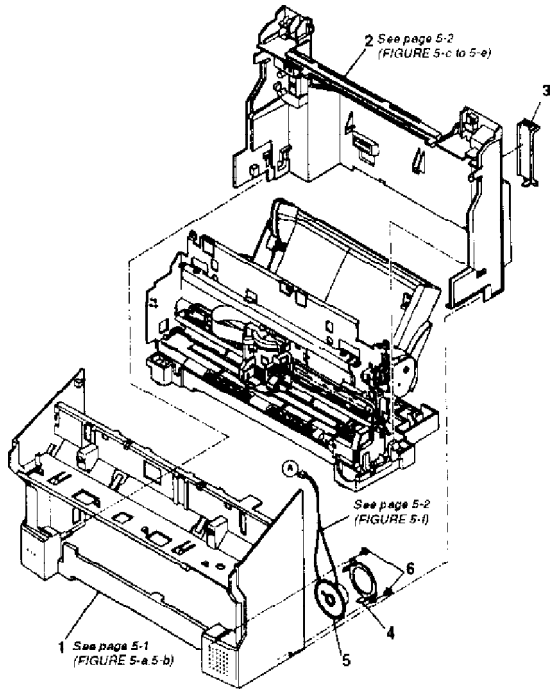

NUM.	PART #	DESCRIPTION
5-1	HB1-1285-000	COVER, MAIN (FRONT)
2	HB1-1286-050	COVER, MAIN (REAR)
3	HB1-1256-000	COVER, INTERFACE CONNECTOR
4	HB1-1224-000	PLATE, SPEAKER MOUNTING
5	HH7-2118-000	SPEAKER
6	XB4-7300-807	SCREW, TAP TIGHT, BINDING HEAD (2)

FIGURE 6 FAXPHONE B550
MAIN COVER & SPEAKER

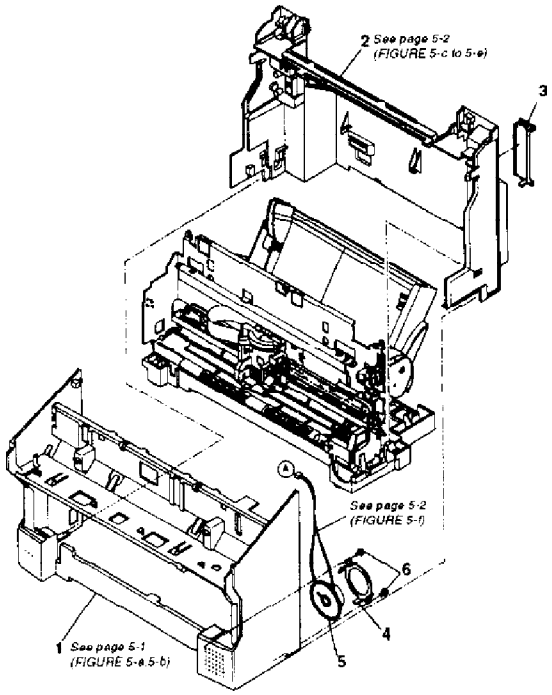

NUM.	PART #	DESCRIPTION
6-1	HB1-1223-040	COVER, MAIN (FRONT)
2	HB1-1190-040	COVER, MAIN (REAR)
3	HB1-1256-000	COVER, INTERFACE CONNECTOR
4	HB1-1224-000	PLATE, SPEAKER MOUNTING
5	HH7-2118-000	SPEAKER
6	XB4-7300-807	SCREW, TAP TIGHT, BINDING HEAD (2)

Canon

FIGURE 7 MultiPASS 800
MAIN COVER & SPEAKER

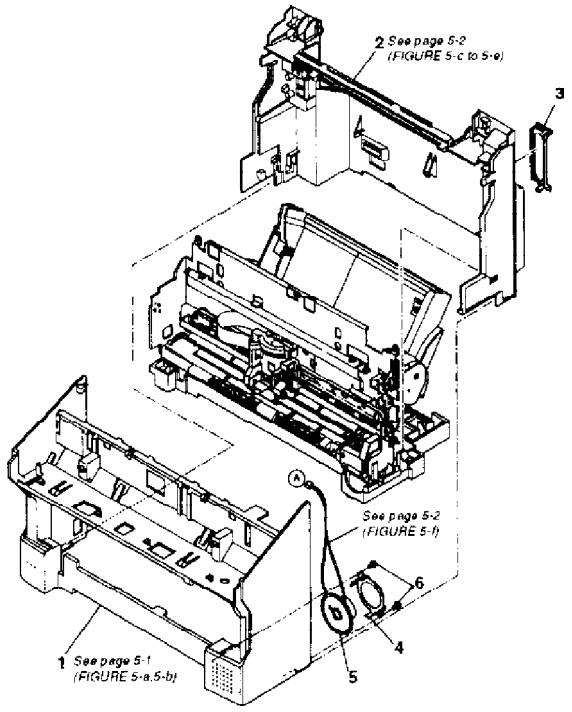

NUM.	PART #	DESCRIPTION
7-1	HB1-1223-040	COVER, MAIN (FRONT)
2	HB1-1190-040	COVER, MAIN (REAR)
3	QB1-0416-000	COVER, INTERFACE CONNECTOR
4	HB1-1224-000	PLATE, SPEAKER MOUNTING
5	HH7-2118-000	SPEAKER
6	XB4-7300-807	SCREW, TAP TIGHT, BINDING HEAD (2)

FIGURE 8 FAXPHONE B540/550
POWER SUPPLY UNIT & ASF &
MAIN BOARD ASS'Y

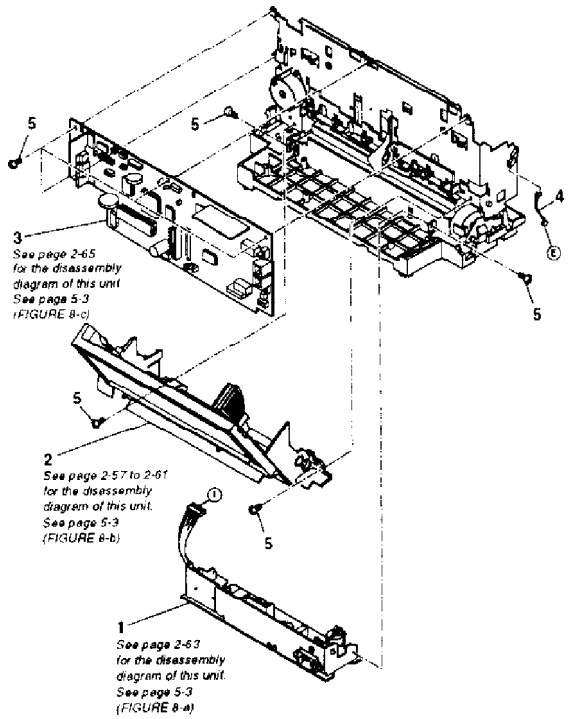
5
5
4
3
See page 2-65 for the disassembly diagram of this unit. See page 5-3 (FIGURE 8-c)
5
5
2
See page 2-57 to 2-61 for the disassembly diagram of this unit. See page 5-3 (FIGURE 8-b)
5
1
See page 2-63 for the disassembly diagram of this unit. See page 5-3 (FIGURE 8-a)

NUM.	PART #	DESCRIPTION
8-1	HH3-5282-000	POWER SUPPLY UNIT
2	HG5-0427-020	AUTO SHEET FEEDER ASSY
3	HG5-0448-100	MAIN BOARD ASSY
4	HH2-2491-000	CABLE WITH CONNECTOR, 2P
5	XB6-7300-407	SCREW, TP, PH M3X4 (7)

FIGURE 9 MultiPASS 800 POWER SUPPLY UNIT & ASF & MAIN BOARD ASS'Y

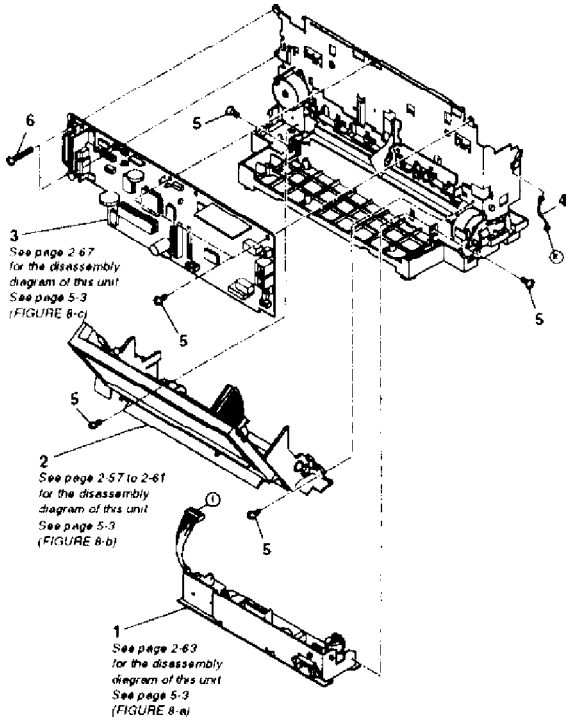
6
5
4
3
See page 2-67 for the disassembly diagram of this unit See page 5-3 (FIGURE 8-c)
5
5
2
See page 2-57 to 2-61 for the disassembly diagram of this unit See page 5-3 (FIGURE 8-b)
5
1
See page 2-63 for the disassembly diagram of this unit See page 5-3 (FIGURE 8-a)

NUM.	PART #	DESCRIPTION
9-1	HH3-5282-000	POWER SUPPLY UNIT
2	HG5-0427-020	AUTO SHEET FEEDER ASSY
3	HG5-0450-000	MAIN BOARD ASSY
4	HH2-2491-000	CABLE WITH CONNECTOR, 2P
5	XB6-7300-407	SCREW, TP, PH M3X4 (6)
6	XB1-1301-207	SCREW, PH3X12 (S) (2)

FIGURE 10 PRINTER ASS'Y & INK ABSORBER & LOWER COVER UNIT

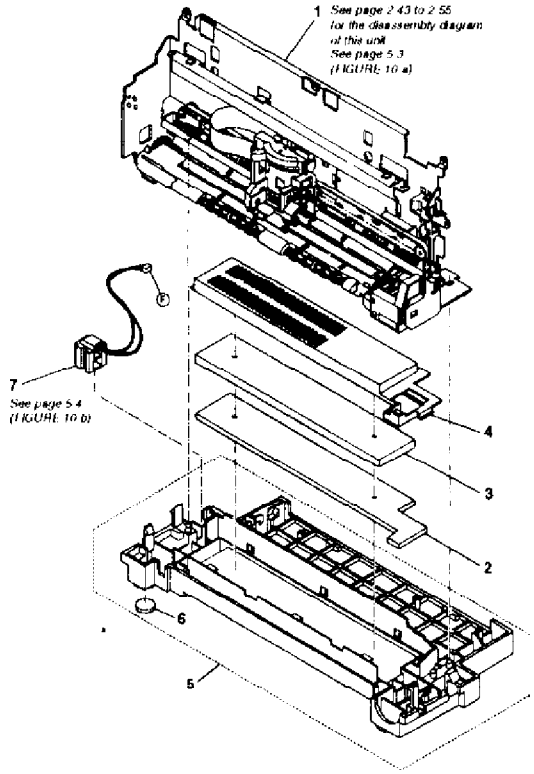

NUM.	PART #	DESCRIPTION
10-1	HG5-0419-000	PRINTER ASSY
2	QB1-0509-000	ABSORBER, WASTE INK
3	QB1-0510-000	ABSORBER, WASTE INK
4	QB1-0508-000	COVER, WASTE INK ABSORBER
5	HF5-0108-000	LOWER COVER UNIT
6	QB1-0507-000	FOOT, PRINTER (4)
7	HH2-2492-000	CABLE WITH MODULAR JACK

FIGURE 11 OPERATION PANEL UNIT & SEPARATION GUIDE & SCANNER BASE UNIT

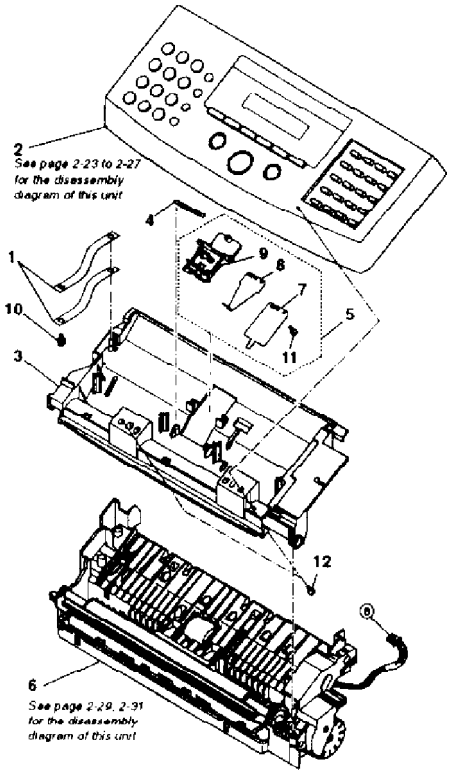

NUM.	PART #	DESCRIPTION
11-1	HB1-1200-000	BELT, STOPPER (2)
2	NPN	OPERATION PANEL UNIT
3	HB1-1199-000	COVER, DOCUMENT GUIDE, UPPER
4	HS5-2041-000	SPRING, COIL
5	HG5-0404-000	SEPARATION GUIDE ASSY
6	NPN	SCANNER BASE UNIT
7	HB1-1255-000	SHEET, SEPARATION GUIDE
8	HB1-1254-000	SPRING, LEAF, GUIDE
9	HF5-0112-000	SEPARATION GUIDE UNIT
10	XA9-0476-000	SCREW, TP M3X8
11	XB4-7200-609	SCREW, M2X6
12	XB4-7301-009	SCREW, BINDING HEAD M3X10 (2)

FIGURE 12 FAXPHONE B540 OPERATION PANEL ASS'Y & OPCNT BOARD ASS'Y

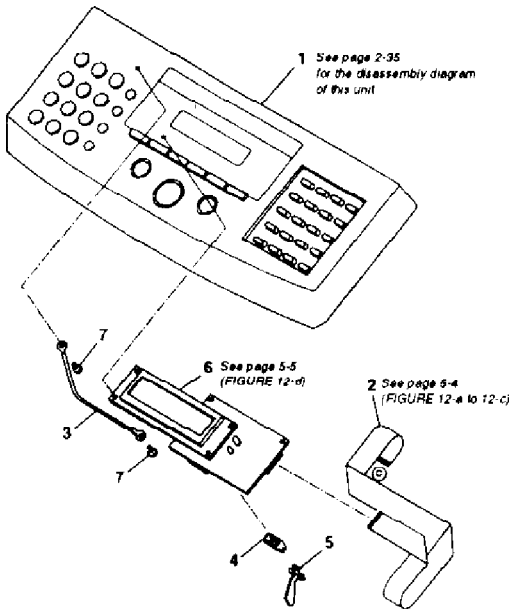

NUM.	PART #	DESCRIPTION
12-1	HG5-0445-020	OPERATION PANEL ASSY (B540)
2	HH2-2449-000	FLAT CABLE
3	HH2-2494-000	WIRE, GROUNDING
4	HB1-1198-000	HOLDER, DETECTION ARM
5	HB1-1197-000	ARM, DETECTION (DS)
6	HG5-0407-000	OPCNT BOARD ASSY
7	XB1-2300-407	SCREW, M3X4

FIGURE 13 FAXPHONE B550
OPERATION PANEL ASS'Y
& OPCNT BOARD ASS'Y

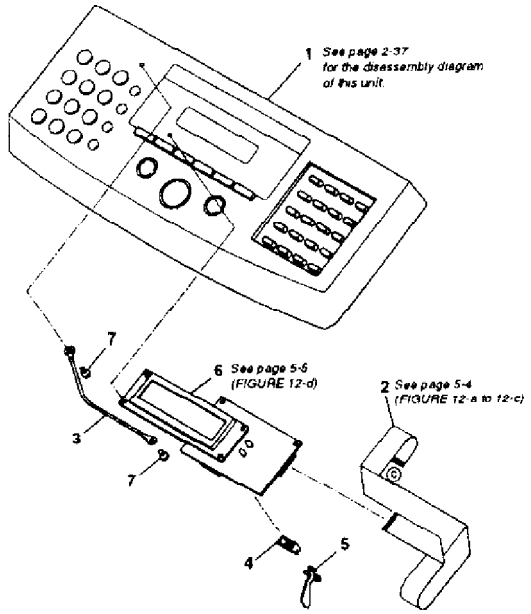

NUM.	PART #	DESCRIPTION
13-1	HG5-0406-030	OPERATION PANEL ASSY (B550)
2	HH2-2449-000	FLAT CABLE
3	HH2-2494-000	WIRE, GROUNDING
4	HB1-1198-000	HOLDER, DETECTION ARM
5	HB1-1197-000	ARM, DETECTION (DS)
6	HG5-0407-000	OPCNT BOARD ASSY
7	XB1-2300-407	SCREW, M3X4

FIGURE 14 MultiPASS 800
OPERATION PANEL ASS'Y
& OPCNT BOARD ASS'Y

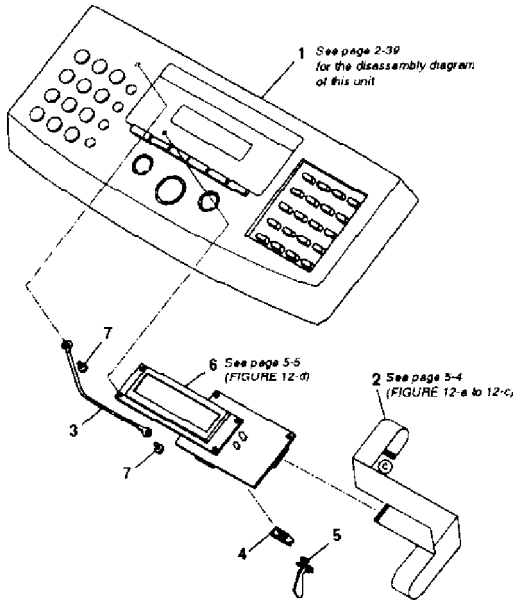

NUM.	PART #	DESCRIPTION
14-1	HG5-0620-020	OPERATION PANEL ASSY (MP800)
2	HH2-2449-000	FLAT CABLE
3	HH2-2494-000	WIRE, GROUNDING
4	HB1-1198-000	HOLDER, DETECTION ARM
5	HB1-1197-000	ARM, DETECTION (DS)
6	HG5-0407-000	OPCNT BOARD ASSY
7	XB1-2300-407	SCREW, M3X4

FIGURE 15 SEPARATION ROLLER ASS'Y & DOCUMENT FEED ROLLER ASS'Y

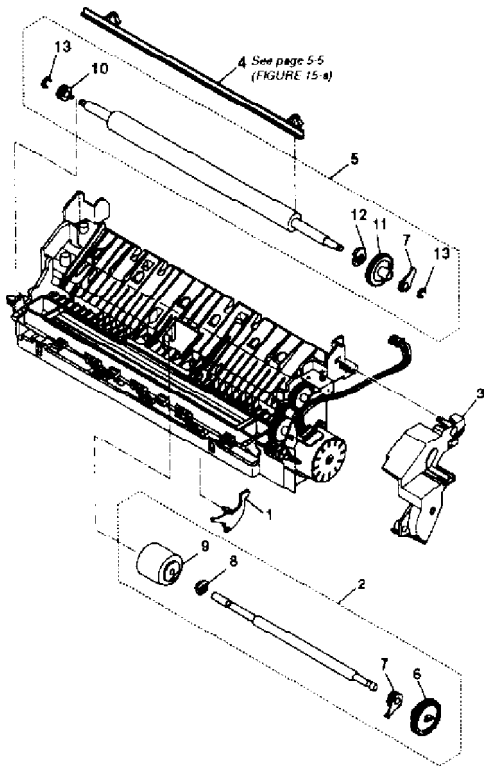

NUM.	PART #	DESCRIPTION
15-1	HB1-1207-000	ARM, DETECTION (DES)
2	HG5-0410-000	SEPARATION ROLLER ASSY
3	HB1-1204-000	COVER, SCANNER DRIVE
4	HB1-1203-000	SHIELD, LIGHT
5	HG5-0412-020	DOCUMENT FEED ROLLER ASSY
6	HS5-0119-000	GEAR WITH ONEWAY CLUTCH, 39T
7	HS5-1028-000	BUSHING (2)
8	HB1-1210-000	CLUTCH
9	HB1-1464-000	ROLLER, SEPARATION
10	HS5-1029-000	BUSHING
11	HS5-0120-000	GEAR, 52T
12	HB1-1214-000	CLUTCH
13	XD2-1100-502	RETAINING RING (E-TYPE) (2)

FIGURE 16 CONTACT SENSOR ASS'Y & SCANNER DRIVE ASS'Y

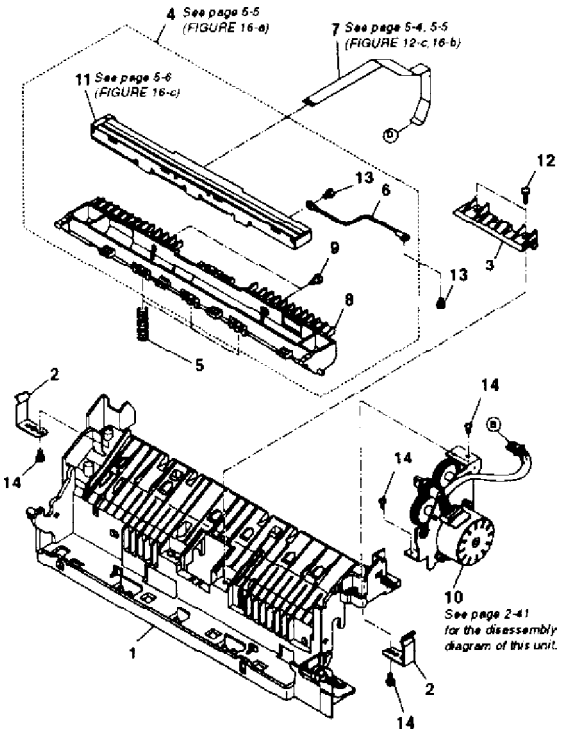

NUM.	PART #	DESCRIPTION
16-1	HB1-1206-050	COVER, DOCUMENT GUIDE, LOWER
2	HB1-1208-000	SPRING, LEAF (2)
3	HB1-1205-000	PLATE, POSITIONING, CS HOLDER
4	HG5-0411-000	CONTACT SENSOR ASSY
5	HS5-2042-000	SPRING, COIL (3)
6	HH2-2494-000	WIRE, GROUNDING
7	HH2-2450-000	FLAT CABLE
8	HB1-1212-030	HOLDER, CONTACT SENSOR
9	HS5-9005-000	SCREW, M2.6X3.5 (2)
10	NPN	SCANNER DRIVE ASSY
11	NPN	CONTACT SENSOR
12	XB4-7301-009	SCREW, BINDING HEAD M3X10 (2)
13	XB1-2300-407	SCREW, M3X4 (2)
14	XB4-7300-807	SCREW, TAP TIGHT, BINDING HEAD (4)

Canon

FIGURE 17 PAPER TRAY COVER ASS'Y
PAPER TRAY

PAPER TRAY COVER ASS'Y

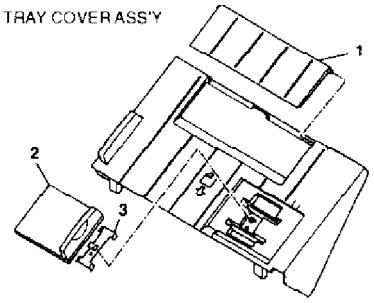

PAPER TRAY

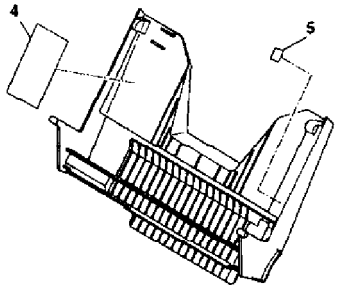

NUM.	PART #	DESCRIPTION
17-1	HB1-1228-000	TRAY, DOCUMENT, EXTENTION
2	HB1-1226-000	GUIDE, DOCUMENT
3	HB1-1227-000	SPRING, LEAF
4	HB1-1265-000	LABEL, PAPER LOADING
5	HB1-0322-000	LABEL, UPPER LIMIT

FIGURE 18 FAXPHONE B540
OPERATION PANEL

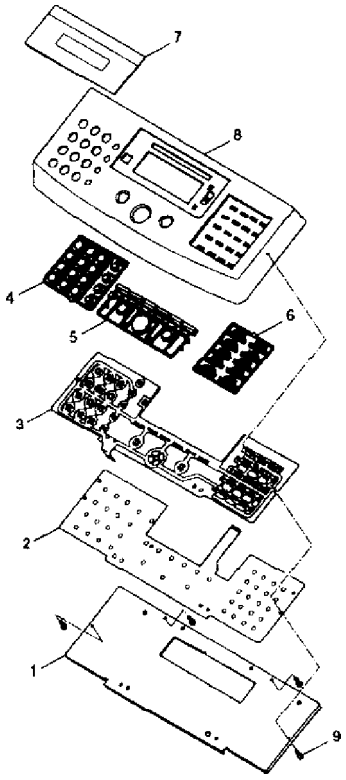

NUM.	PART #	DESCRIPTION
18-1	HY7-2621-000	PLATE, OPERATION PANEL
2	HY7-2620-000	SHEET, MEMBRANE
3	HY7-2619-000	SHEET, CONTINUITY
4	HY7-2616-000	KEYTOP, DIAL
5	HY7-2617-000	KEYTOP, MAIN
6	HY7-2618-000	KEYTOP, ONE TOUCH DIAL
7	HY7-2615-000	COVER, DISPLAY
8	HY7-2623-000	COVER, OPERATION PANEL (B540)
9	HY7-2622-000	SCREW, TAP, M3.5X6 (4)

FIGURE 19 FAXPHONE B550
OPERATION PANEL

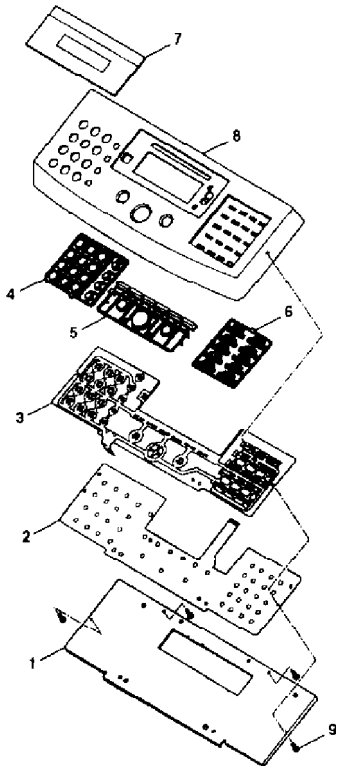

NUM.	PART #	DESCRIPTION
19-1	HY7-2621-000	PLATE, OPERATION PANEL
2	HY7-2620-000	SHEET, MEMBRANE
3	HY7-2619-000	SHEET, CONTINUITY
4	HY7-2616-000	KEYTOP, DIAL
5	HY7-2617-000	KEYTOP, MAIN
6	HY7-2618-000	KEYTOP, ONE TOUCH DIAL
7	HY7-2615-000	COVER, DISPLAY
8	HY7-2624-000	COVER, OPERATION PANEL (B550)
9	HY7-2622-000	SCREW, TAP, M3.5X6 (4)

FIGURE 20 MultiPASS 800
OPERATION PANEL

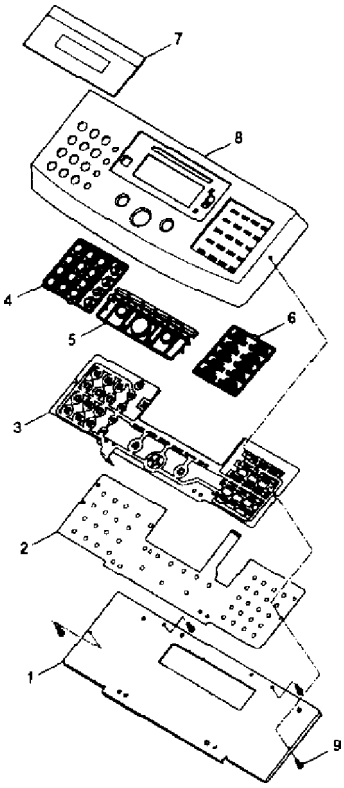

NUM.	PART #	DESCRIPTION
20-1	HY7-2621-000	PLATE, OPERATION PANEL
2	HY7-2620-000	SHEET, MEMBRANE
3	HY7-2619-000	SHEET, CONTINUITY
4	HY7-2616-000	KEYTOP, DIAL
5	HY7-2617-000	KEYTOP, MAIN
6	HY7-2618-000	KEYTOP, ONE TOUCH DIAL
7	HY7-2626-000	COVER DISPLAY (MP800)
8	HY7-2625-000	COVER, OPERATION PANEL (MP800)
9	HY7-2622-000	SCREW, TAP M3.5X6 (4)

FIGURE 21 DOCUMENT FEED MOTOR & SCANNER DRIVE GEARS

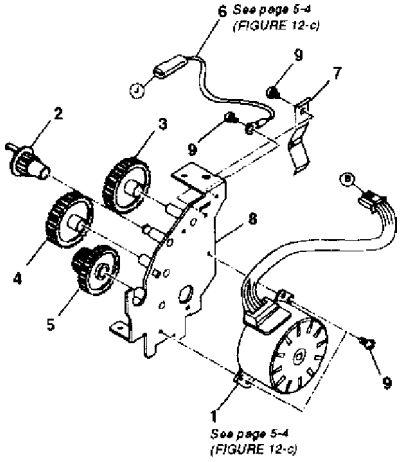

NUM.	PART #	DESCRIPTION
21-1	HH7-2093-000	PULSE MOTOR, DOCUMENT FEED
2	HS5-0124-000	GEAR, 17T
3	HS5-0122-000	GEAR, 51/17T
4	HS5-0121-000	GEAR, 52T
5	HS5-0123-000	GEAR, 50T
6	HH2-2495-000	WIRE, GROUNDING
7	HB1-1219-000	PLATE, GROUNDING
8	HF5-0105-000	PLATE, SCANNER DRIVE
9	XB1-2300-407	SCREW, M3X4 (4)

FIGURE 22 PURGE UNIT & CARRIAGE SECTION (1)

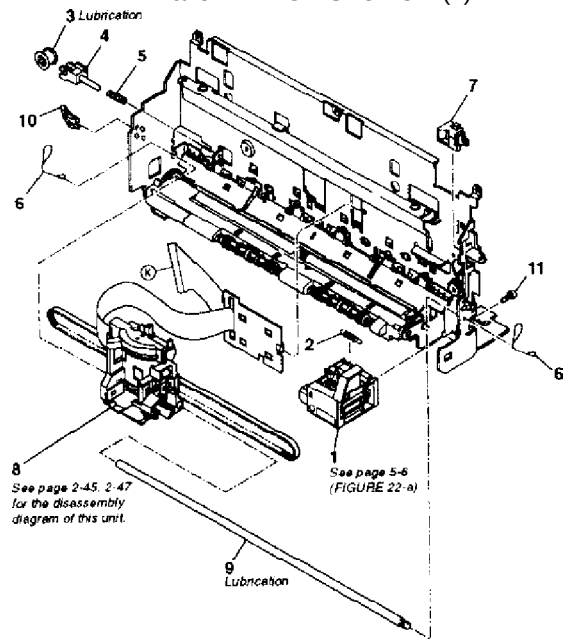

NUM.	PART #	DESCRIPTION
22-1	QG5-0126-000	PURGE UNIT
2	QB1-0467-000	SPRING, HOOK END COIL
3	QB1-0501-020	ROLLER, IDLER
4	QB1-0502-020	BRACKET, IDLER
5	QB1-0503-000	SPRING, COIL
6	QB1-0499-000	CLIP,SHAFT (2)
7	QB1-0406-000	GUIDE, CORNER
8	HG5-0422-000	CARRIAGE ASSY
9	HB1-1232-000	SHAFT, CARRIAGE
10	HH7-2175-000	MICRO SWITCH
11	XB4-7300-609	SCREW, TAP, BINDING HEAD, M3X6

FIGURE 23 CARRIAGE SECTION (2)

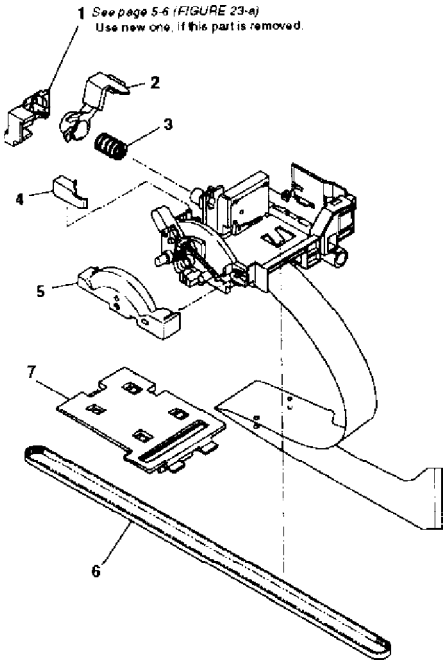

NUM.	PART #	DESCRIPTION
23-1	QB1-0440-000	COVER, HOOK
2	HB1-1263-000	LEVER, HOOKING
3	QB1-0439-000	SPRING, COIL
4	QB1-0438-000	HOOK, CARRIAGE
5	HB1-1237-000	COVER, CARRIAGE TOP
6	QB1-0434-000	BELT, CARRIAGE
7	HB1-1231-000	HOLDER, CARRIAGE RIBBON CABLE

FIGURE 24 CARRIAGE SECTION (3)

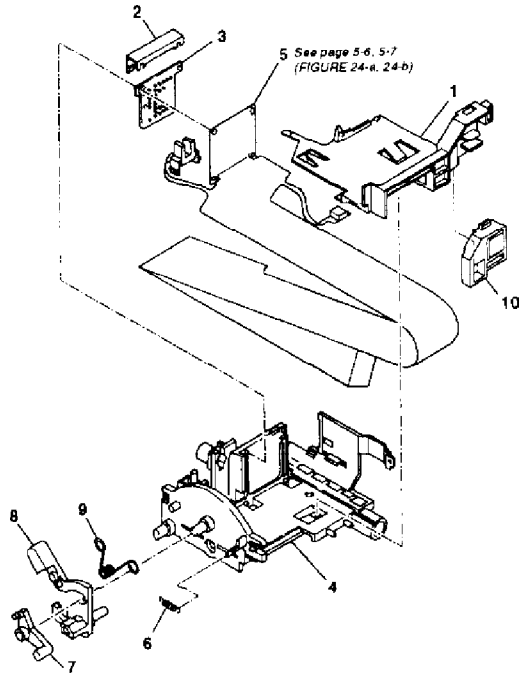

NUM.	PART #	DESCRIPTION
24-1	HB1-1236-000	GUIDE, RIBBON CABLE
2	QB1-0441-000	HOLDER, RIBBON CABLE (UPPER)
3	QB1-0436-000	PAD, CONTACT
4	HB1-1241-000	BASE, CARRIAGE
5	HG5-0423-020	CARRIAGE RIBBON CABLE ASSY
6	QB1-0449-000	SPRING, HOOK END COIL
7	HB1-1239-000	CAM, TENSION
8	HB1-1238-000	LEVER, FORMS THICKNESS
9	QB1-0446-000	SPRING, TORSION
10	HB1-1240-000	PLATE,POSITIONING,INK SENSOR

FIGURE 25 CARRIAGE MOTOR & PAPER FEED MOTOR

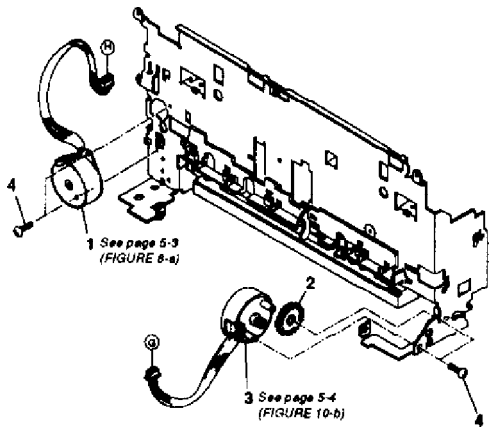

NUM.	PART #	DESCRIPTION
25-1	HH7-2160-000	PULSE MOTOR, CARRIAGE
2	QB1-0500-000	GEAR, SLOW DOWN
3	QH4-4035-000	PULSE MOTOR, PAPER FEED
4	XB1-2300-407	SCREW, M3X4 (4)

FIGURE 26 PAPER FEED SECTION (1)

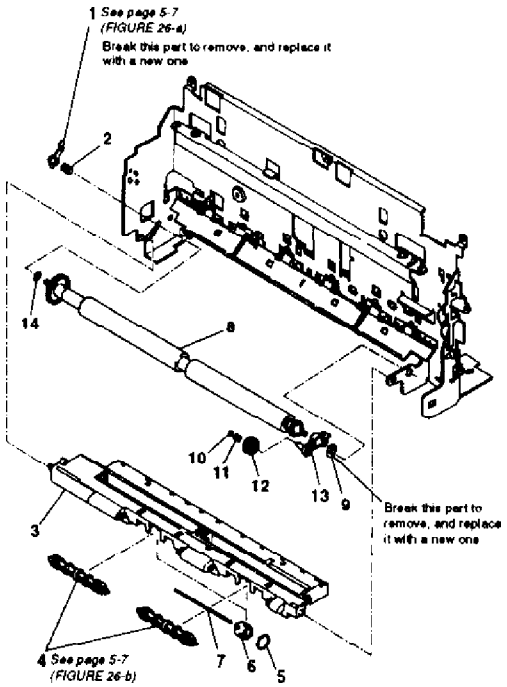

NUM.	PART #	DESCRIPTION
26-1	QB1-0417-000	BUSHING
2	QB1-0423-000	SPRING, COIL
3	HB1-1242-000	PLATEN
4	HG5-0433-000	PAPER EJECT ROLLER ASSY (2)
5	QB1-0429-030	RING, RUBBER (2)
6	QB1-0428-000	ROLLER, TRANSMISSION (2)
7	QB1-0419-000	SHAFT, ROLLER (2)
8	HF5-0106-000	ROLLER, PAPER FEED
9	QB1-0422-000	BUSHING
10	XA9-0613-000	NUT,SUS
11	QB1-0421-000	SPRING, COIL
12	QB1-0425-000	GEAR, TRANSMISSION
13	QB1-0420-000	ARM, TRANSMISSION
14	QB1-0622-000	WASHER, PLAIN

FIGURE 27 PAPER FEED SECTION (2) CARRIAGE GUIDE FRAME

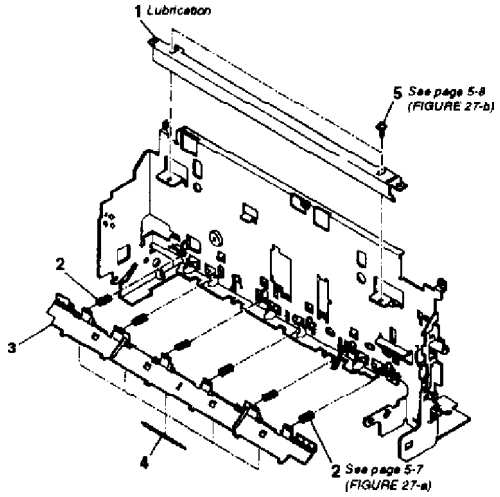

NUM.	PART #	DESCRIPTION
27-1	QB1-0404-000	FRAME, CARRIAGE GUIDE
2	QB1-0410-000	SPRING, COIL (6)
3	HB1-1233-000	PLATE, PRESSURE
4	QB1-0684-000	ROLLER, PRESSURE (5)
5	HS5-9003-000	SCREW, BH(RED) M3X4 (2)

FIGURE 28 PRINTER FRAME

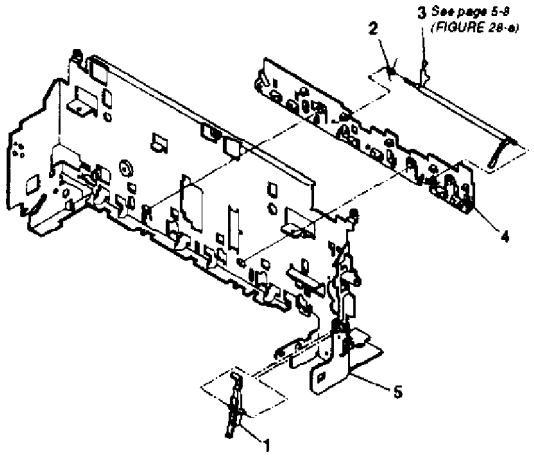

NUM.	PART #	DESCRIPTION
28-1	QB1-0413-000	ARM, SENSOR
2	QB1-0412-000	SPRING, TORSION
3	QB1-0411-000	ARM, PAPER SENSOR
4	HB1-1235-000	GUIDE, PRESSURE PLATE
5	HB1-1234-000	FRAME, PRINTER

FIGURE 29 AUTO SHEET FEEDER (1)

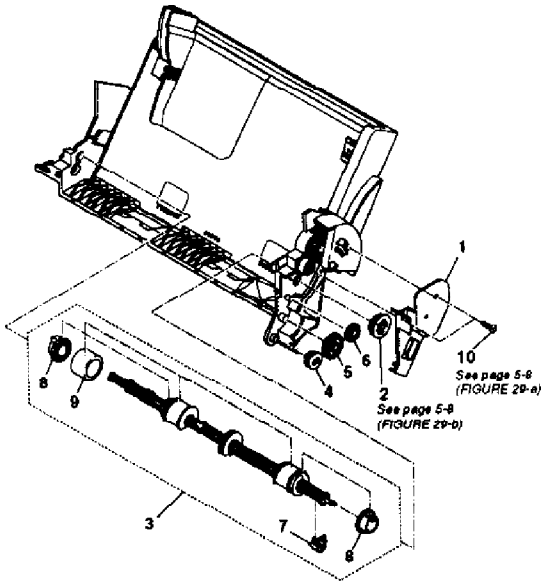

FIGURE 30 AUTO SHEET FEEDER (2)

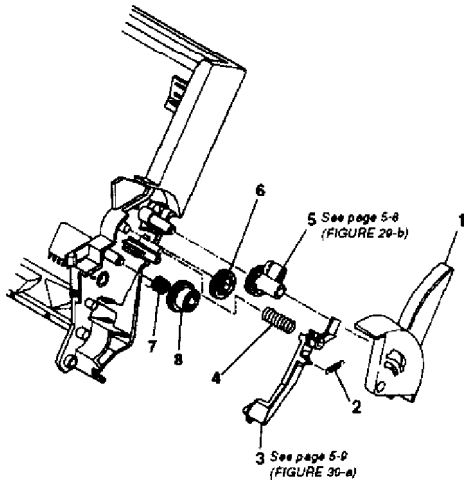

NUM.	PART #	DESCRIPTION
29-1	HB1-1247-000	COVER, LEVER GUIDE
2	QB1-0478-000	GEAR, PICKUP ROLLER
3	HG5-0432-000	PAPER PICKUP ROLLER ASSY
4	QB1-0485-000	GEAR, TRANSMISSION
5	QB1-0480-000	GEAR, TRANSMISSION
6	QB1-0479-000	GEAR, TRANSMISSION
7	QB1-0433-000	PAPER, GUIDE
8	QB1-0495-000	ROLLER, SLIP (2)
9	QB1-0496-000	RING, RUBBER, PICK-UP (2)
10	XB4-7300-807	SCREW, TAP TIGHT, BINDING HEAD (2)

NUM.	PART #	DESCRIPTION
30-1	QB1-0476-000	LEVER, PAPER SELECTION
2	QB1-0490-000	COIL, SPRING HOOK END
3	QB1-0475-000	ARM, CORNER
4	QB1-0489-000	SPRING, COIL
5	QB1-0477-000	GEAR, CAM
6	QB1-0484-000	GEAR, TRANSMISSION
7	QB1-0482-000	SPRING, ONE WAY CLUTCH
8	QB1-0483-000	GEAR, ONE WAY CLUTCH

FIGURE 31 AUTO SHEET FEEDER (3)

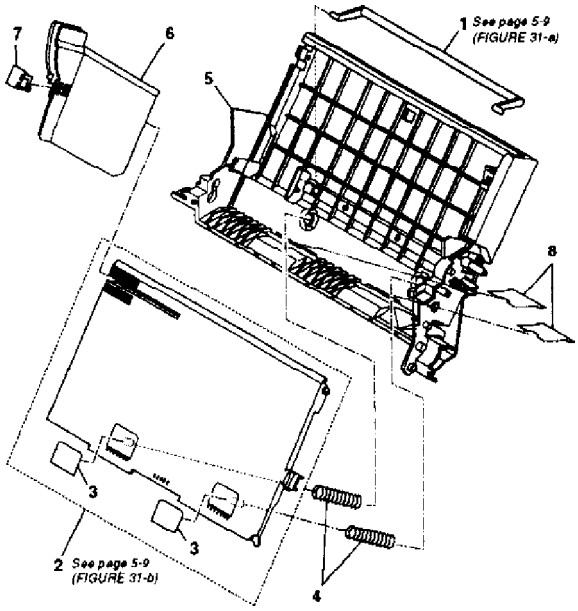

NUM.	PART #	DESCRIPTION
31-1	QB1-0487-000	CAM, ROD
2	HF5-0107-000	PAPER LIFTING PLATE ASSY
3	QB1-0493-000	SHEET, FRICTION (2)
4	QB1-0491-000	SPRING, COIL (2)
5	HB1-1246-000	FRAME, CUT SHEET FEEDER
6	HB1-1248-050	GUIDE, PAPER
7	HB1-1257-040	STOPPER, PAPER GUIDE
8	HB1-1287-000	SHEET, STOPPER (2)

FIGURE 32 FUSE, POWER SUPPLY

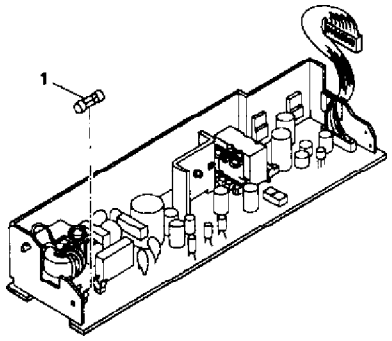

NUM.	PART #	DESCRIPTION
32-1	HY7-2614-000	FUSE, 125V, 2A

FIGURE 33 FAXPHONE B540/B550
MAIN BOARD ASS'Y

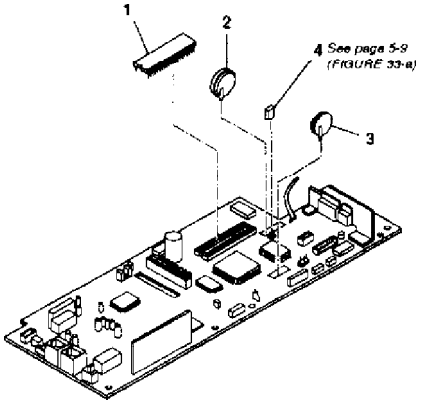

NUM.	PART #	DESCRIPTION
33 - 1	HH4-2645-020	IC, TC538200AP-E348, MASK ROM
2	WK1-5110-000	LITHIUM BATTERY, CR2450VN75N
3	WK1-5107-000	POLYSENE BATTERY <2ND>
4	WS1-0172-000	PLUG, SHORT

FIGURE 34 MultiPASS 800
MAIN BOARD ASS'Y

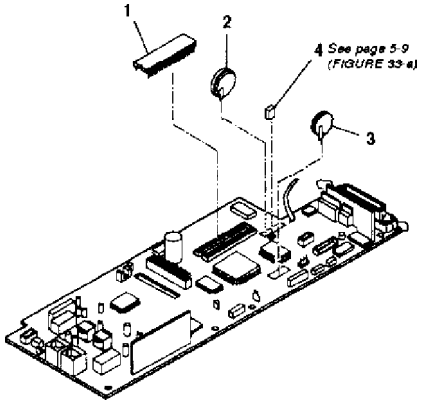

NUM.	PART #	DESCRIPTION
34-1	HH4-2500-000	IC, UPD23C8000WG5-000-7JF
2	WK1-5110-000	LITHIUM BATTERY,CR2450VN75N
3	WK1-5107-000	POLYSENE BATTERY <2ND>
4	WS1-0172-000	PLUG, SHORT